



Jumru

Jumru[®]



Table of Contents


Singer..... 2

Singer

Singer Guide

Model: 30.602

 
268310



Singer Knife

Model: 27.503

 GU 3606, Peschke Nr. 18



Singer Knife

Model: 27.502

GU 3605, Peschke Nr. 19



Singer Knife

Model: 28.895

CT82264

Singer Knife

Model: 28.603

CT42309

Singer Knife

Model: 28.602

CT42305



Singer Knife

Model: 27.496

CT270619



Singer Knife

Model: 27.495

CT270616



Singer Knife

Model: 28.894

CT164556



Singer Knife

Model: 28.892

CT164550



Singer Knife

Model: 28.891

CT164308



Singer Knife

Model: 28.893

CT164026



Singer Knife

Model: 27.489

8061 A-3.1



Singer Knife

Model: 27.501

785780-001

Singer Knife

Model: 27.425a

71-90 9/16 HSS

Singer KnifeModel: 27.427a

71-90 7/8 HSS

Singer KnifeModel: 27.423a

71-90 7/16 HSS

Singer KnifeModel: 27.426a

71-90 5/8 HSS

Singer KnifeModel: 27.421a

71-90 5/16 HSS

Singer KnifeModel: 28.373

71-90 3/8 HSS

Singer KnifeModel: 27.429a

71-90 3/4 HSS

Singer KnifeModel: 27.431a

71-90 15/16 HSS

Singer KnifeModel: 27.430a

71-90 13/16 HSS

Singer KnifeModel: 27.428a

71-90 11/16 HSS

Singer KnifeModel: 28.370

71-90 1/8 HSS

Singer KnifeModel: 28.371

71-90 1/4 HSS

Singer KnifeModel: 27.424a

71-90 1/2 HSS

Singer KnifeModel: 30.647

71-90 1 1/8 HSS

Singer KnifeModel: 30.646

71-90 1 1/4 HSS

Singer KnifeModel: 27.432a

71-90 1 HSS

Singer KnifeModel: 27.425

71 9/16 HSS

Singer KnifeModel: 27.427

71 7/18 HSS

Singer KnifeModel: 27.423

71 7/16 HSS

Singer KnifeModel: 27.426

71 5/8 HSS

Singer KnifeModel: 27.421

71 5/16 HSS

Singer KnifeModel: 27.422

71 3/8 HSS

Singer KnifeModel: 27.429

71 3/4 HSS

Singer KnifeModel: 27.431

71 15/16 HSS

Singer KnifeModel: 27.430

Singer KnifeModel: 27.428

71 11/16 HSS

Singer KnifeModel: 27.419

71 1/8 HSS

Singer KnifeModel: 27.420

71 1/4 HSS

Singer KnifeModel: 27.424

 
71 1/2 HSS

Singer KnifeModel: 27.437

71 1 3/8 HSS

Singer KnifeModel: 27.435


71 1 3/16 HSS

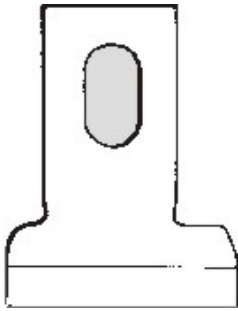

Singer Knife

Model: 27.434

 
71 1 1/8 HSS

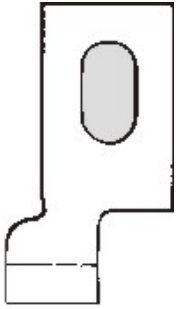

Singer Knife

Model: 27.436

 
71 1 1/4 HSS

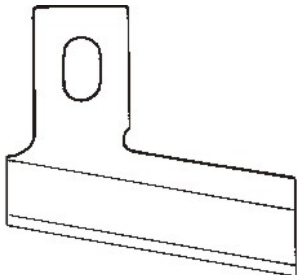

Singer Knife

Model: 27.438

 
71 1 1/2 HSS

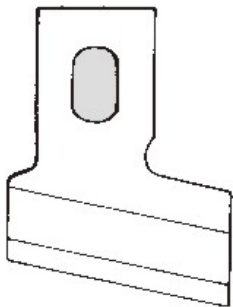

Singer Knife

Model: 27.433

 
71 1 1/16 HSS

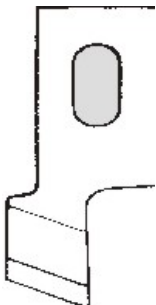


Singer Knife

Model: 27.432

 
71 1 HSS




Singer Knife
Model: 30.645
 548936

 

Singer Knife
Model: 30.644
 548935

 

Singer Knife
Model: 30.643
 548886

 

Singer Knife
Model: 30.632
 544599



 
Singer Knife
Model: 30.631
 414030



Singer Knife
Model: 30.630
 414029




Singer Knife
Model: 28.918
 412585 (CT)

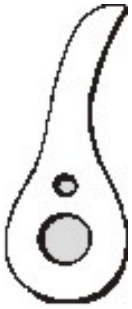

Singer Knife

Model: 27.390

 40048 Kl. 71-30

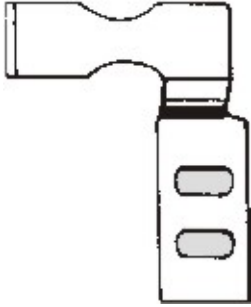

Singer Knife

Model: 27.493

40035 271926



Singer Knife

Model: 27.417

39867 Kl. 71-48/71-112



Singer Knife

Model: 27.391

39609 Kl. 71-30



Singer Knife

Model: 30.620

377560 G60540114P700

**Singer Knife**Model: 30.619

377559 G6050113C500

**Singer Knife**Model: 30.618

377465

**Singer Knife**Model: 30.617

 
377462 6031314C500

**Singer Knife**Model: 30.616

377443 6031218P700

**Singer Knife**Model: 30.615


344559

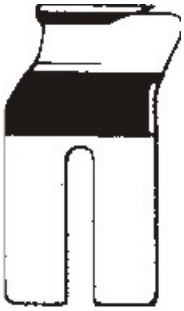

Singer Knife

Model: 28.583

 249191-3.1

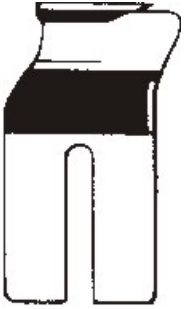

Singer Knife

Model: 27.490

 
249191 HSS



Singer Knife

Model: 27.482

241574 HSS



Singer Knife

Model: 28.582

238508 HSS



Singer Knife

Model: 27.459

164813 (CT)



Singer Knife

Model: 27.450

 
164809 (CT)



Singer Knife

Model: 28.889


147211, 276489 (CT)

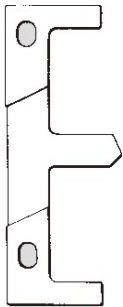

Singer Knife

Model: 28.005

 
107519= 2119685 Dürkopp

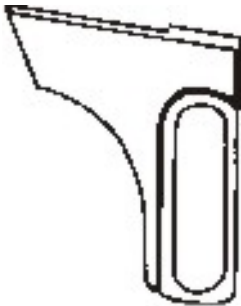

Singer Knife

Model: 30.606

 540760

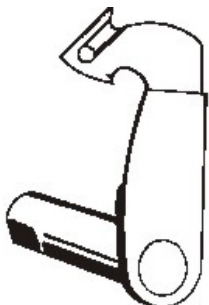

Singer Knife

Model: 30.605

540741



Singer Knife

Model: 28.917

 
410295



Singer Knife

Model: 30.604

373539

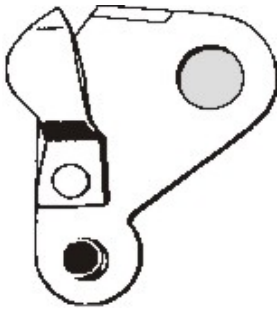

Singer Knife

Model: 30.603

373537



Singer Knife

Model: 29.072

 
270619



Singer Knife

Model: 29.071


270616

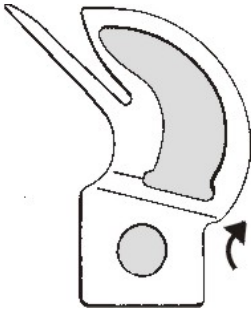

Singer Knife

Model: 28.606

 239715

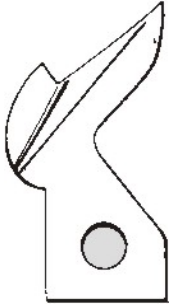

Singer Knife

Model: 27.500

239372



Singer Knife

Model: 27.996

 
239367



Singer Knife

Model: 30.601


238548



Singer Knife

Model: 27.487

 
238546



Singer Knife

Model: 27.486

 
238543



Singer Knife

Model: 27.485

 238508



Singer Knife

Model: 27.479

233934

Singer Knife

Model: 27.457

164728



Singer Knife

Model: 27.305

 
164556

Singer KnifeModel: 27.456

164552

**Singer Knife**Model: 27.384

164550

**Singer Knife**Model: 27.383

 
164308

**Singer Knife**Model: 27.387

164233

**Singer Knife**Model: 27.386


164037



Singer Knife

Model: 27.382

 164026



Singer Knife

Model: 27.415

 
107797



Singer Knife

Model: 30.600

82264

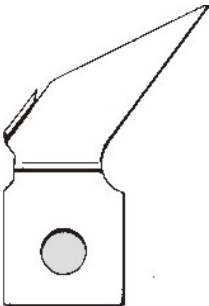

Singer Knife

Model: 27.498

55459



Singer Knife

Model: 27.499

55458



Singer Knife

Model: 27.381

 
42309



Singer Knife

Model: 27.380


42305

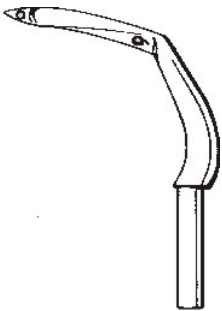

Singer Looper

Model: 30.648

 UL605294

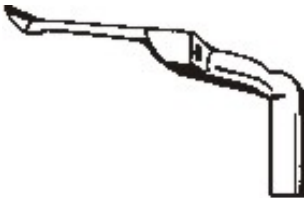

Singer Looper

Model: 30.629

 
377740 UL603881 UL600881



Singer Looper

Model: 30.628


377691 GUL605150

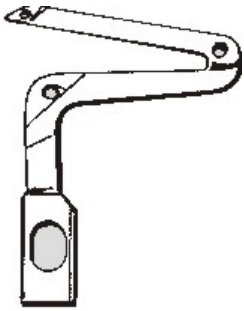

Singer Looper

Model: 30.627

 
377641 LL604884 LL600884

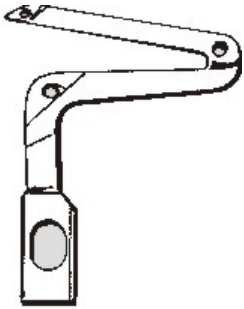

Singer Looper

Model: 30.626

 
377640 LL604885

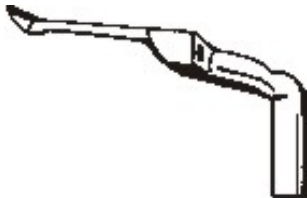

Singer Looper

Model: 30.625

 
377639 GUL604152

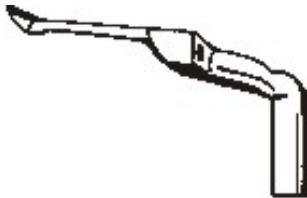

Singer Looper

Model: 30.624

 
377638 UL604883 UL600883

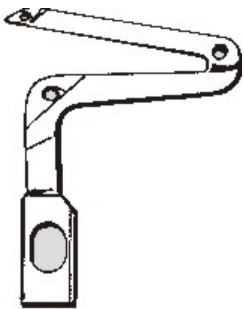

Singer Looper

Model: 30.623

 
377602 LL603884

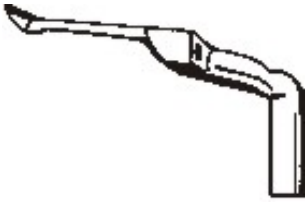

Singer Looper

Model: 30.622

 377601 UL603886 UL600886

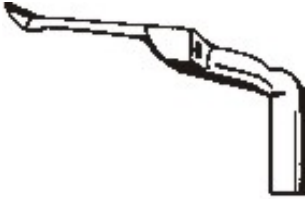

Singer Looper

Model: 30.621

377600 UL603880 UL600880



Singer Looper

Model: 30.614

32824



Singer Looper

Model: 30.613

32823



Singer Looper

Model: 30.612

 
32821



Singer Looper

Model: 30.611


32820

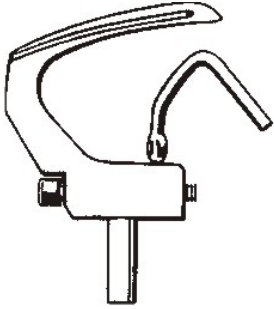

Singer Looper

Model: 29.070

 
268382 281208

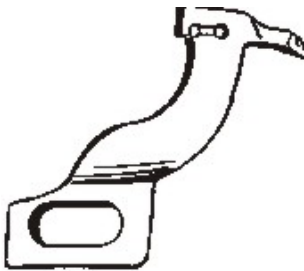

Singer Looper

Model: 30.610

 
548232

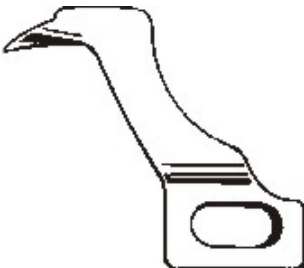

Singer Looper

Model: 30.609

 
548231

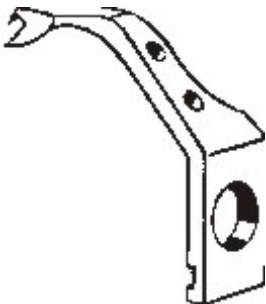

Singer Looper

Model: 30.608

 
548207

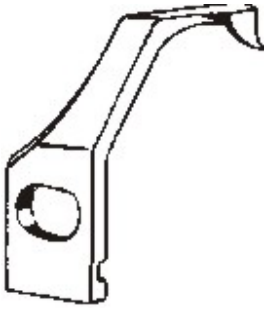

Singer Looper

Model: 30.607

 
548205

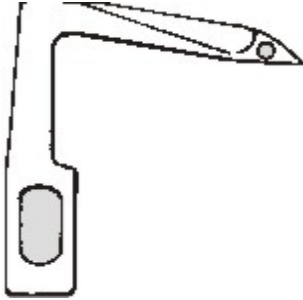

Singer Looper

Model: 28.916

 412553

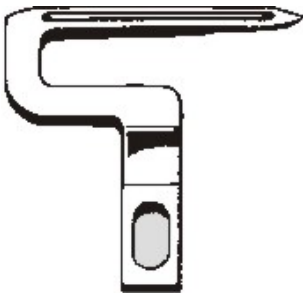

Singer Looper

Model: 28.915

 
410452



Singer Looper

Model: 28.914


410434

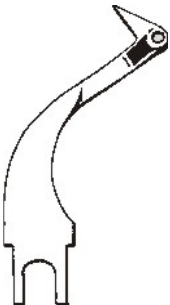

Singer Looper

Model: 28.913

 410262

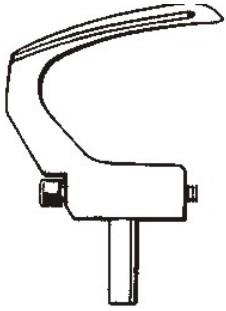

Singer Looper

Model: 27.474

268380

Singer Looper

Model: 27.406

175547



Singer Looper

Model: 27.405

175085



Singer Looper

Model: 27.401

 
164619



Singer Looper

Model: 27.400

164375



Singer Looper

Model: 27.399

 
164252



Singer Looper

Model: 27.397


164045

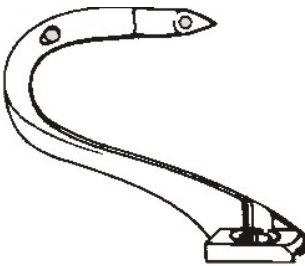

Singer Looper

Model: 27.506

 
42239

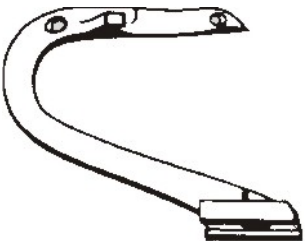

Singer Looper

Model: 27.396

 42220

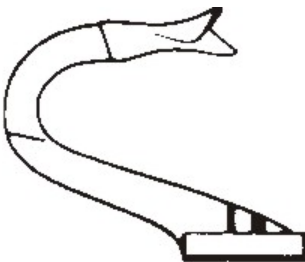

Singer Looper

Model: 27.997

42072



Singer Plate

Model: 27.462

5730 3/32 142032, 52131



Singer Plate

Model: 27.464

 
5730 3/16



Singer Plate

Model: 27.463

"5730 1/8"



Singer Plate

Model: 27.409

39608 Kl. 71-30

Singer Steel

Model: 30.642

548771 1 5/8"

Singer Steel

Model: 30.641

548770 1 1/2"

Singer Steel

Model: 30.640

548769 1 3/8"

Singer Steel

Model: 30.639

548768 1 1/4"

Singer Steel

Model: 30.638

548767 1 1/8"

Singer Steel

Model: 30.637

548766 1"

Singer Steel

Model: 30.636

548765 7/8"

Singer Steel

Model: 30.635

548764 3/4"

Singer Steel

Model: 30.634

548763 5/8"



Singer Steel

Model: 30.633

548762 1/2"

