



Jumner

Jumner®




Table of Contents

Singer..... 2

Singer


Singer Guide

 Model: 30.602



Singer Knife

 Model: 27.503



Singer Knife

Model: 27.502



Singer Knife

Model: 28.895

Singer Knife

Model: 28.603

 
Singer Knife

Model: 28.602



Singer Knife

Model: 27.496



Singer Knife

Model: 27.495



Singer Knife

Model: 28.894



Singer Knife

Model: 28.892



Singer Knife

Model: 28.891



Singer Knife

Model: 28.893



Singer Knife

Model: 27.489



Singer Knife

Model: 27.501

Singer Knife

Model: 27.425a

Singer Knife

Model: 27.427a

Singer Knife

Model: 27.423a

Singer Knife

Model: 27.426a

Singer Knife

Model: 27.421a

Singer Knife

Model: 28.373

Singer Knife

Model: 27.429a

Singer Knife

Model: 27.431a

Singer Knife

Model: 27.430a

Singer Knife

Model: 27.428a

Singer Knife

Model: 28.370

Singer Knife

Model: 28.371

Singer Knife

Model: 27.424a

Singer Knife

Model: 30.647

Singer Knife

Model: 30.646

Singer Knife

Model: 27.432a

Singer Knife

Model: 27.425

Singer Knife

Model: 27.427

Singer Knife

Model: 27.423

Singer Knife

Model: 27.426

Singer Knife

Model: 27.421

Singer Knife

Model: 27.422

Singer Knife

Model: 27.429

Singer Knife

Model: 27.431

Singer Knife

Model: 27.430

Singer Knife

Model: 27.428

Singer Knife

Model: 27.419

Singer Knife

Model: 27.420

Singer Knife

 
Model: 27.424

Singer Knife


Model: 27.437

Singer Knife


Model: 27.435

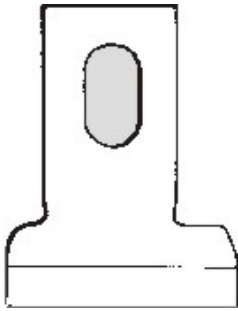


Singer Knife

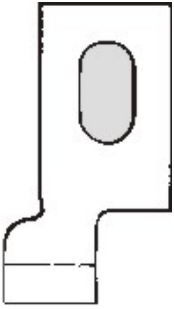 Model: 27.434

 
Singer Knife

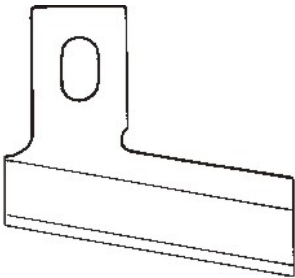Model: 27.436

 Singer Knife

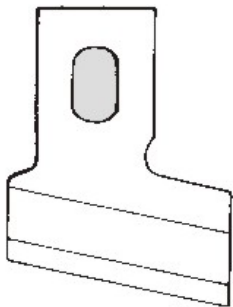
Model: 27.438

 Singer Knife

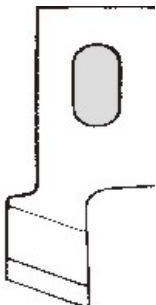
Model: 27.433

Singer Knife

 
Model: 27.432




Singer Knife

 Model: 30.645

 Singer Knife

Model: 30.644

 Singer Knife

Model: 30.643

Singer Knife

Model: 30.632

Singer Knife

 
Model: 30.631

Singer Knife

Model: 30.630


Singer Knife

Model: 28.918

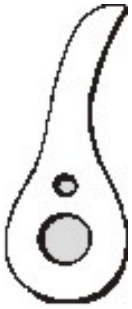

Singer Knife

 Model: 27.390

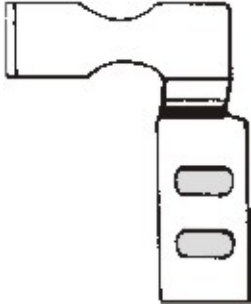

Singer Knife

Model: 27.493



Singer Knife

Model: 27.417



 
Singer Knife

Model: 27.391



Singer Knife

Model: 30.620



Singer Knife

Model: 30.619



Singer Knife

Model: 30.618



Singer Knife

Model: 30.617



 
Singer Knife

Model: 30.616




Singer Knife

Model: 30.615

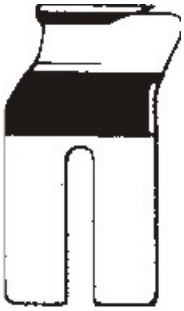

Singer Knife

 Model: 28.583

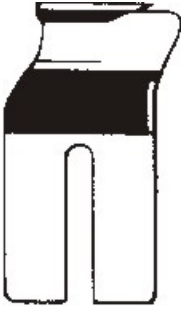


Singer Knife

Model: 27.490



Singer Knife

 Model: 27.482



Singer Knife

Model: 28.582



Singer Knife

Model: 27.459



 
Singer Knife

Model: 27.450




Singer Knife

Model: 28.889

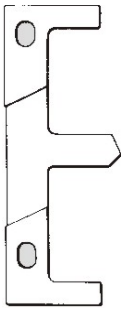


Singer Knife

 Model: 28.005

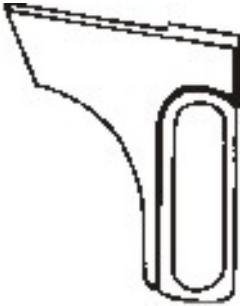

Singer Knife

 Model: 30.606

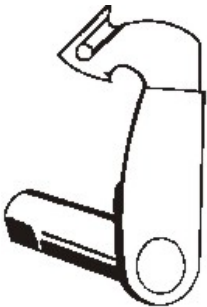

Singer Knife

 
Model: 30.605



Singer Knife

Model: 28.917

Singer Knife

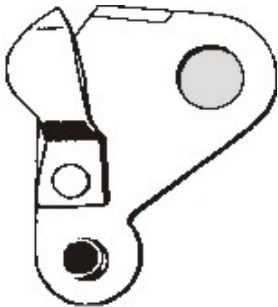Model: 30.604

Singer Knife

 
Model: 30.603

Singer Knife

Model: 29.072


Singer Knife

Model: 29.071

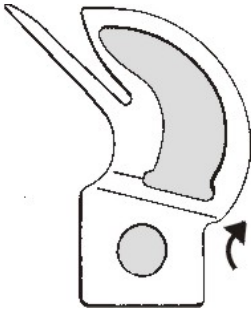

Singer Knife

 Model: 28.606

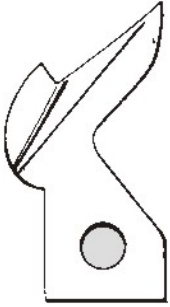


Singer Knife

Model: 27.500




Singer Knife

 Model: 27.996




Singer Knife

 Model: 30.601




Singer Knife

 Model: 27.487




Singer Knife

 Model: 27.486



Singer Knife

 Model: 27.485



Singer Knife

Model: 27.479

Singer Knife

Model: 27.457



Singer Knife

Model: 27.305

 
Singer Knife

Model: 27.456



Singer Knife

Model: 27.384




Singer Knife

Model: 27.383




Singer Knife

 Model: 27.387



Singer Knife

 Model: 27.386



Singer Knife

Model: 27.382



 
Singer Knife

Model: 27.415



Singer Knife

Model: 30.600

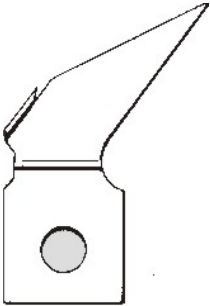

Singer Knife

Model: 27.498



Singer Knife

 
Model: 27.499



Singer Knife

Model: 27.381

Singer Knife

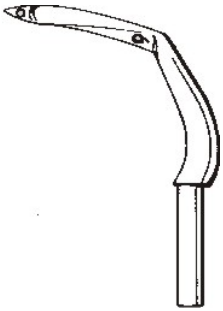Model: 27.380

Singer Looper

 
Model: 30.648

Singer Looper

Model: 30.629


Singer Looper

Model: 30.628

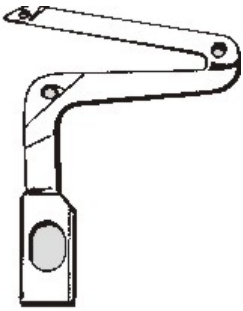


Singer Looper

 Model: 30.627

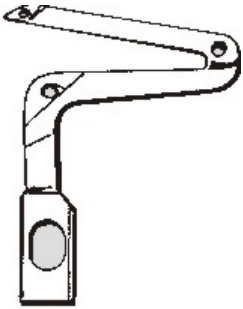


Singer Looper

 Model: 30.626

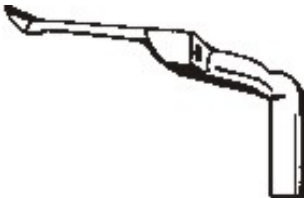


Singer Looper

 Model: 30.625

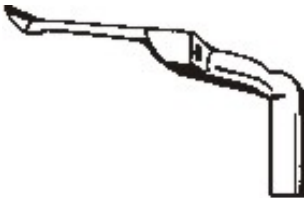


Singer Looper

 Model: 30.624

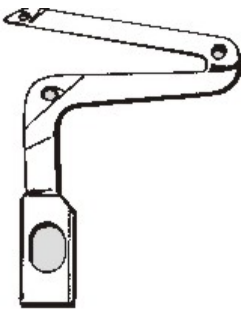

Singer Looper

 Model: 30.623

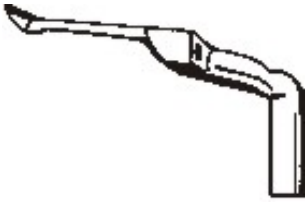

Singer Looper

Model: 30.622



Singer Looper

Model: 30.621



Singer Looper

Model: 30.614



Singer Looper

Model: 30.613



 
Singer Looper

Model: 30.612




Singer Looper

Model: 30.611

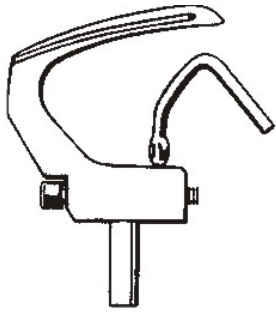


Singer Looper

 Model: 29.070

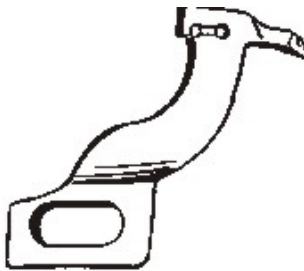


Singer Looper

 Model: 30.610

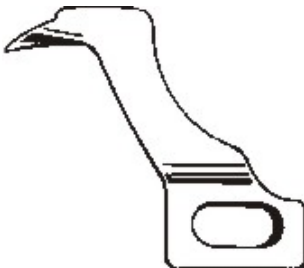


Singer Looper

 Model: 30.609

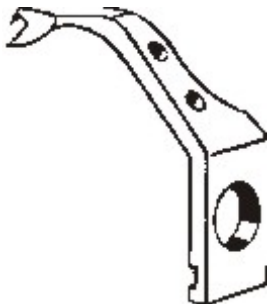


Singer Looper

 
Model: 30.608

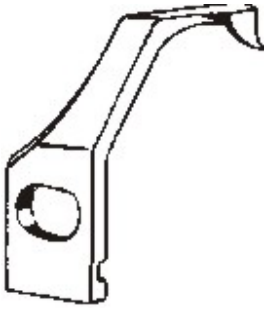

Singer Looper

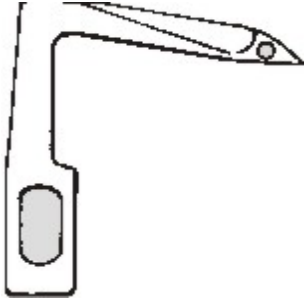 Model: 30.607

 
Singer Looper

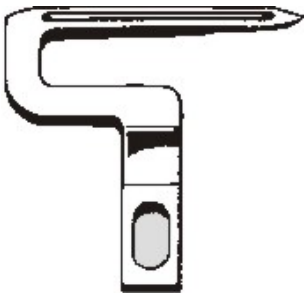Model: 28.916

Singer Looper


Model: 28.915

 Singer Looper

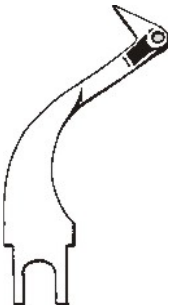Model: 28.914

Singer Looper

 Model: 28.913

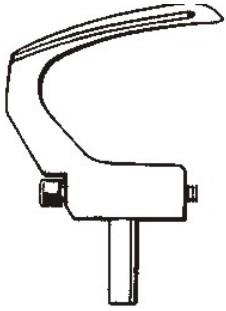

Singer Looper

Model: 27.474

Singer Looper

Model: 27.406



Singer Looper

Model: 27.405



 
Singer Looper

Model: 27.401



Singer Looper


Model: 27.400




Singer Looper

Model: 27.399

 
Singer Looper

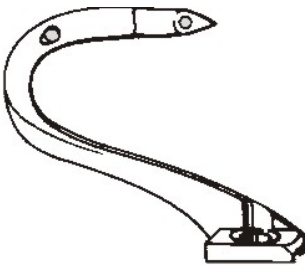Model: 27.397

 Singer Looper

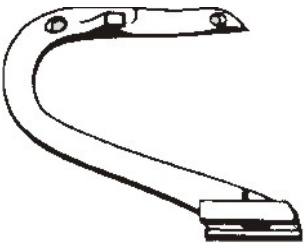Model: 27.506

 Singer Looper

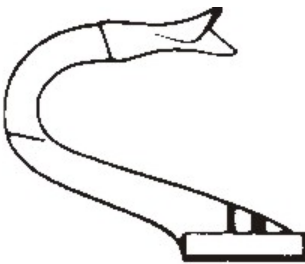Model: 27.396

Singer Looper

Model: 27.997



Singer Plate

Model: 27.462



 
Singer Plate

Model: 27.464



Singer Plate

Model: 27.463



Singer Plate

Model: 27.409

Singer Steel

Model: 30.642

Singer Steel

Model: 30.641

Singer Steel

Model: 30.640

Singer Steel

Model: 30.639

Singer Steel

Model: 30.638

Singer Steel

Model: 30.637

Singer Steel

Model: 30.636

Singer Steel

Model: 30.635

Singer Steel

Model: 30.634



Singer Steel

Model: 30.633

